

COMMISSIONING GUIDE

Kakadu with Selectronic SP PRO SPLC1202 & AERL CoolMax SRX

Control philosophy, hardware, connections and SP LINK set-up

AERL Kakadu • Rev 1.1.5

This guide shows how to commission an AERL Kakadu 120 battery system with Selectronic SP PRO SPLC1202 inverters and AERL CoolMax SRX 120 charge controllers, with the AERL Nexus Gateway as the system EMS.

REVISION 1.1.5	EFFECTIVE 10 / 2026	AUDIENCE Licensed electrical workers	BATTERY Kakadu 120 (managed)
INVERTER SP PRO SPLC1202	CHARGE CONTROLLER CoolMax SRX 120	EMS AERL Nexus Gateway	SP LINK BATTERY TYPE BMS – SelectCell River Gum
CAN CABLE AT SP PRO SP PRO to BMS cable	SOC SOURCE Kakadu BMS via CAN	CAN BUS SP PRO → Nexus → SRX → Kakadu	NEXUS → SP PRO CAN + RS485 Modbus RTU

— IN THIS GUIDE

01	Control philosophy	03	02	Required hardware	05
	Nexus as EMS, managed battery, roles			Bill of materials, SP PRO prerequisites	
03	Connections	06	04	Set-up	10
	Connection table, system examples, SP PRO to BMS cable			Nexus, EMS firmware, SRX set-up, SP PRO Modbus settings	
05	AERL technical support	13			
	Contact details, what to send				

Introduction

This guide covers the system-level commissioning of a Kakadu 120 battery bank operating with Selectronic SP PRO SPLC1202 inverters and AERL CoolMax SRX 120 DC-coupled MPPT charge controllers. It sets out AERL's recommended control philosophy, the hardware required, how the communications are connected, and the settings to program into the Nexus and the SP PRO.

It does not replace the product manuals. Install each item in accordance with its own documentation first.

Reference documents

DOCUMENT	USE IT FOR
AERL Kakadu 120 Installation and Operating Manual, V1.1	Cabinet installation, BMS chain, Master Unit / Last Unit settings
AERL Kakadu Combiner Box Installation Guide, Rev 2.0.0	DC paralleling of cabinets to the inverters
AERL Nexus installer guide — Selectronic SP PRO → AERL Cloud, Rev 1.0.0	Nexus wiring, getting online, claiming, adding the SP PRO
Selectronic SP PRO Manual (OI0003, Rev 47)	Inverter installation and operation
Selectronic SP LINK Manual (OI0005, Rev 31)	SP LINK configuration settings



WHO MAY COMMISSION THIS SYSTEM

Installation, termination and commissioning must be carried out only by a licensed electrical worker competent in battery energy storage systems, in accordance with AS/NZS 3000 and AS/NZS 5139.



CHANGES FROM REV 1.0.0

SP LINK now supports the Kakadu as a managed battery. The SP PRO is set to battery type **BMS – SelectCell River Gum** and takes its charge limits and SoC from the Kakadu over CAN. The Rev 1.0.0 *Custom* battery settings and the 80% SoC bulk-charge split between the SP PRO and the SRX no longer apply, and the Rev 1.0.0 SP LINK configuration file is withdrawn.

Rev 1.1.1 adds the SP PRO to BMS cable pinout (section 3.4) and the CAN termination settings (section 3.1). Rev 1.1.2 adds the CAN_H / CAN_L signal assignment from the Selectronic application note. Rev 1.1.3 replaces the cable photos with a pinout diagram and removes the Battery Type, Battery Capacity and Generator Auto Start set-up sections. Rev 1.1.4 adds CoolMax SRX set-up with AERL Link (section 4.2). Rev 1.1.5 restores the SP LINK Battery Type screenshot (Figure 4.3).

CHAPTER 01

Control philosophy

AERL recommends the following control philosophy for the Kakadu battery.

- **The AERL Nexus Gateway is the EMS for the entire system.**
- **The Kakadu is a managed battery.** Its master BMS broadcasts the battery's safe operating window over CAN bus.
- **The SP PRO SPLC1202 runs the Kakadu as a managed battery**, with SP LINK battery type *BMS – SelectCell River Gum*. It reads the Kakadu's CAN data directly, and the SelectCell River Gum profile applies the correct voltage and charge settings.
- **The Nexus monitors the SP PRO and sends target charge control points to the CoolMax SRX.**
- **The CoolMax SRX charges from solar** to the target charge control points set by the Nexus.

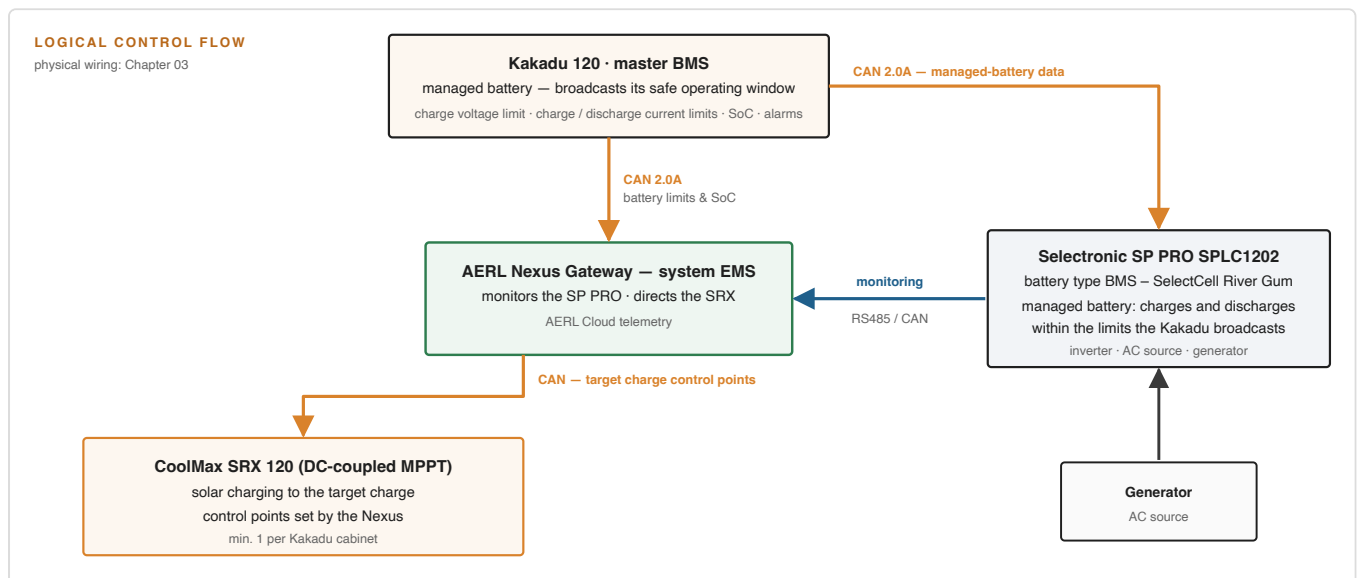


FIGURE 1.1 Logical control flow. The Kakadu broadcasts its limits on the CAN bus. The SP PRO operates within them, and the Nexus monitors the SP PRO and directs the SRX.

Roles

COMPONENT	ROLE IN THE SYSTEM	LINK
Kakadu 120 master BMS	Managed battery. Broadcasts the safe operating window: charge voltage limit, charge and discharge current limits, SoC and alarms.	CAN 2.0A
SP PRO SPLC1202	Inverter, AC source management and generator charger. Managed battery type <i>BMS – SelectCell River Gum</i> . Charges and discharges within the Kakadu's limits.	CAN 2.0A (end of the bus). RS485 Modbus RTU to the Nexus
AERL Nexus Gateway	System EMS. Monitors the SP PRO and sends target charge control points to the SRX. Telemetry to AERL Cloud.	CAN (mid-bus). RS485 Modbus RTU to the SP PRO (Nexus is the only master)
CoolMax SRX 120	DC-coupled solar charging to the Nexus target charge control points	CAN
Generator	AC source for the SP PRO	Started by the SP PRO according to its Generator Auto Start settings

State of charge

With a managed battery type, the SP PRO takes the battery SoC directly from the Kakadu BMS. No SP PRO DC shunt is needed on the SRX output.

CHAPTER 02

Required hardware

2.1 Bill of materials

ITEM	QUANTITY	NOTES
AERL Nexus Gateway	1 per system	One Nexus covers the whole site. Do not put a second gateway, data logger or remote screen on the same SP PRO Modbus link.
AERL CoolMax SRX 120	Minimum 1 per Kakadu cabinet	Size the PV array for each SRX according to its datasheet.
AERL Kakadu 120 cabinet	1 to 16	Two strings (two BMS) per cabinet
Selectronic SP PRO SPLC1202	As designed	For example, 1 for single-phase or 3 in PowerChain for three-phase
AERL Kakadu Combiner Box	As required	Parallels up to 4 cabinets, with one output per SPLC1202. See the Combiner Box guide.
RS485 patch lead	1	Straight-through CAT5e or CAT6, Nexus RS485 to SP PRO ACC Port 1. Keep it short.
SP PRO to BMS cable	1	SP PRO CAN socket to Nexus CAN 2 . Not a straight-through lead (section 3.4).
CAN leads	1 per hop	Shielded CAT5e or CAT6, made to length: Nexus → SRX → ... → Kakadu master BMS INV
CAN termination	—	No terminator plugs needed. The Kakadu BMS terminates automatically, the SP PRO uses a DIP switch on its comms card, and each SRX has a CANBUS 120 Ω switch (section 3.1).
Ethernet lead	1	Nexus ETH to the site router
Laptop with Selectronic SP LINK	1	Must be a version of SP LINK that lists the battery type <i>BMS – SelectCell River Gum</i>

2.2 SP PRO prerequisites

Check the following in SP LINK under **Data View → Inverter Details** before you connect the Nexus.

#	REQUIREMENT
1	The inverter is a Series 2i, or an equivalent newer model.
2	The Comms Card (ACC) revision is 8 or higher.
3	The SP PRO firmware is V14.47 or newer.
4	The ACC firmware is V4.31 or newer.
5	SP LINK offers BMS – SelectCell River Gum under Battery Type. If it does not, update SP LINK and the SP PRO firmware before you continue.



EMS FIRMWARE

The Nexus Gateway and every CoolMax SRX must run AERL's EMS firmware for this control philosophy. AERL installs it remotely during commissioning (section 4.1.2).

CHAPTER 03

Connections

Two communication links make up the control system.

- **CAN bus** (CAN 2.0A): **SP PRO → Nexus → CoolMax SRX → Kakadu**
- **RS485** (Modbus RTU): **Nexus → SP PRO**, for monitoring

FROM	TO	LINK	CABLE	NOTES
SP PRO CAN	Nexus CAN 2	CAN 2.0A	SP PRO to BMS cable (section 3.4)	The SP PRO is one end of the bus: set the CAN termination DIP switch on its comms card to ON. On a PowerChain system, connect to the master only.
Nexus CAN 1	CoolMax SRX (last in chain) CAN	CAN 2.0A	Shielded CAT5e/CAT6	Nexus CAN 1 and CAN 2 are linked internally, so the Nexus sits mid-bus. Do not fit a terminator at the Nexus.
CoolMax SRX CAN	Next CoolMax SRX CAN	CAN 2.0A	Shielded CAT5e/CAT6	Daisy-chain every SRX on the same bus. Set the CANBUS 120 Ω switch on every SRX to OFF.
CoolMax SRX (first in chain) CAN	Kakadu master BMS INV	CAN 2.0A	Shielded CAT5e/CAT6	The other end of the bus. The Kakadu BMS terminates automatically.
BMS OUT	Next BMS IN	Kakadu BMS chain	Made to length	See Kakadu 120 manual, step 7 and §5.5.
Nexus RS485	SP PRO ACC Port 1	RS485 · Modbus RTU	Straight-through CAT5e/CAT6	Slave 1, 9600 baud, 8N1. The Nexus is the only Modbus master. On a PowerChain system, connect to the master only.
Nexus ETH	Site router	Ethernet	CAT5e/CAT6	Connects automatically to AERL Cloud

3.1 Rules for the communications wiring

1. **One CAN bus.** The Kakadu, the SRX units, the Nexus and the SP PRO share a single CAN bus. Its order is SP PRO → Nexus → SRX → Kakadu.
2. **CAN bus termination.** The two ends of the bus are the SP PRO and the Kakadu master BMS, and each needs 120 Ω termination. Nothing in between should be terminated.

DEVICE	POSITION ON THE BUS	TERMINATION SETTING
SP PRO (PowerChain master)	End	CAN termination DIP switch on the comms card ON
AERL Nexus Gateway	Mid-bus	None — do not fit a terminator
CoolMax SRX (every unit)	Mid-bus	CANBUS 120 Ω switch OFF
Kakadu master BMS	End	Automatic — nothing to set

3. **Master BMS.** The BMS whose **INV** port connects to the CAN bus is the master. Leave its **Master Unit** LED lit and turn it off on every other BMS. Leave **Last Unit** lit on the final string in the chain only (Kakadu 120 manual §6.3 and §6.4).
4. **PowerChain master only.** On a PowerChain system, connect the CAN bus and the RS485 lead to the PowerChain master only. The other inverters receive battery data over Selectronic's PowerChain link.
5. **Cabling practice.** Mount the Nexus as close as possible to the SP PRO, so that the RS485 run is short. Use shielded CAT5e/CAT6 for CAN, with the shield earthed at one end only. Keep comms cables separated from DC power runs. Contact AERL for any CAN run longer than about 100 m.

3.2 Simple system — 1 × Nexus, 1 × SPLC1202, 1 × CoolMax SRX

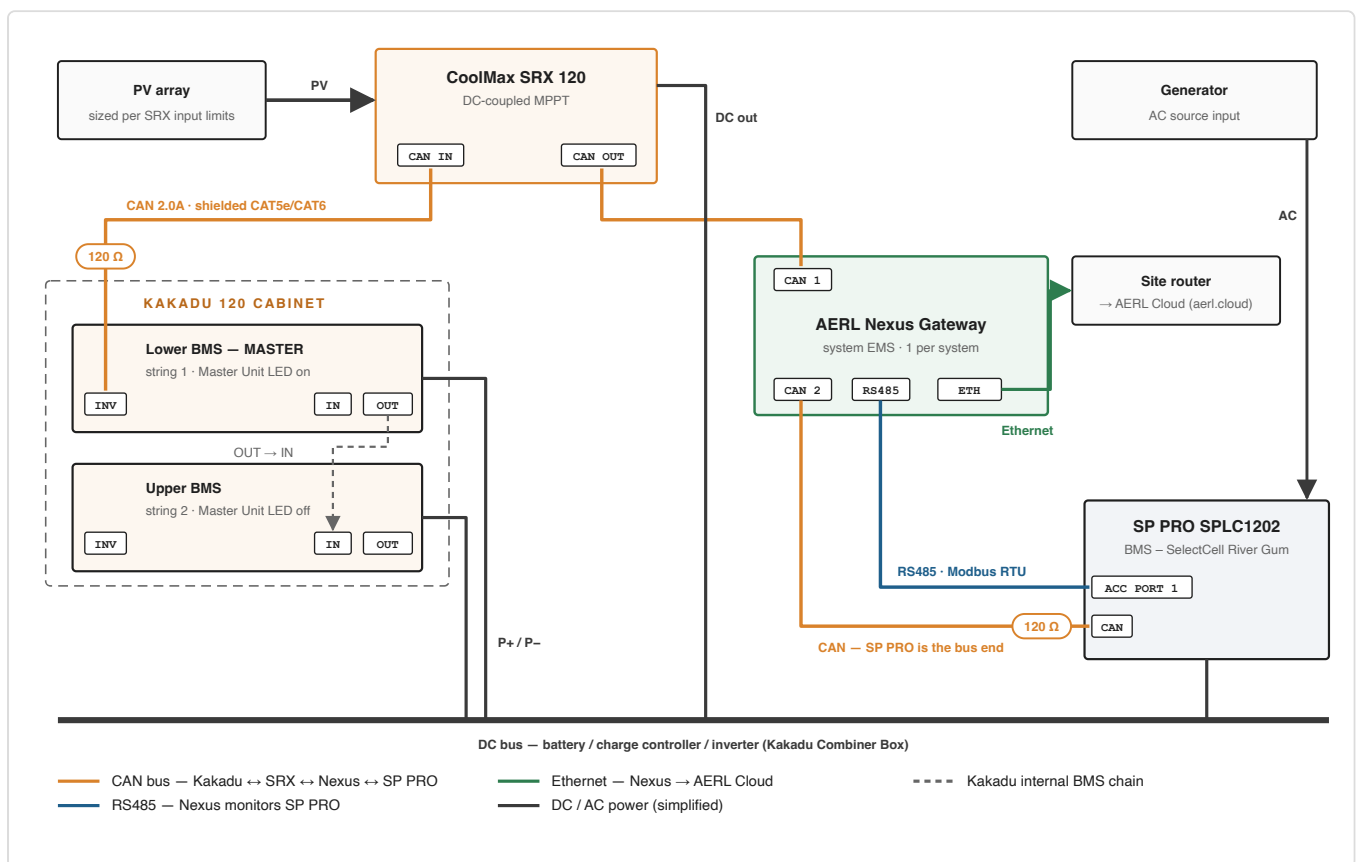


FIGURE 3.1 One Kakadu 120 cabinet, one CoolMax SRX 120, one SP PRO SPLC1202 and one Nexus Gateway. The CAN bus runs from the master BMS **INV** port through the SRX and the Nexus to the SP PRO. RS485 runs from the Nexus to ACC Port 1.

3.3 Multi-cabinet example — 4 × Kakadu, 4 × SRX, 3 × SPLC1202

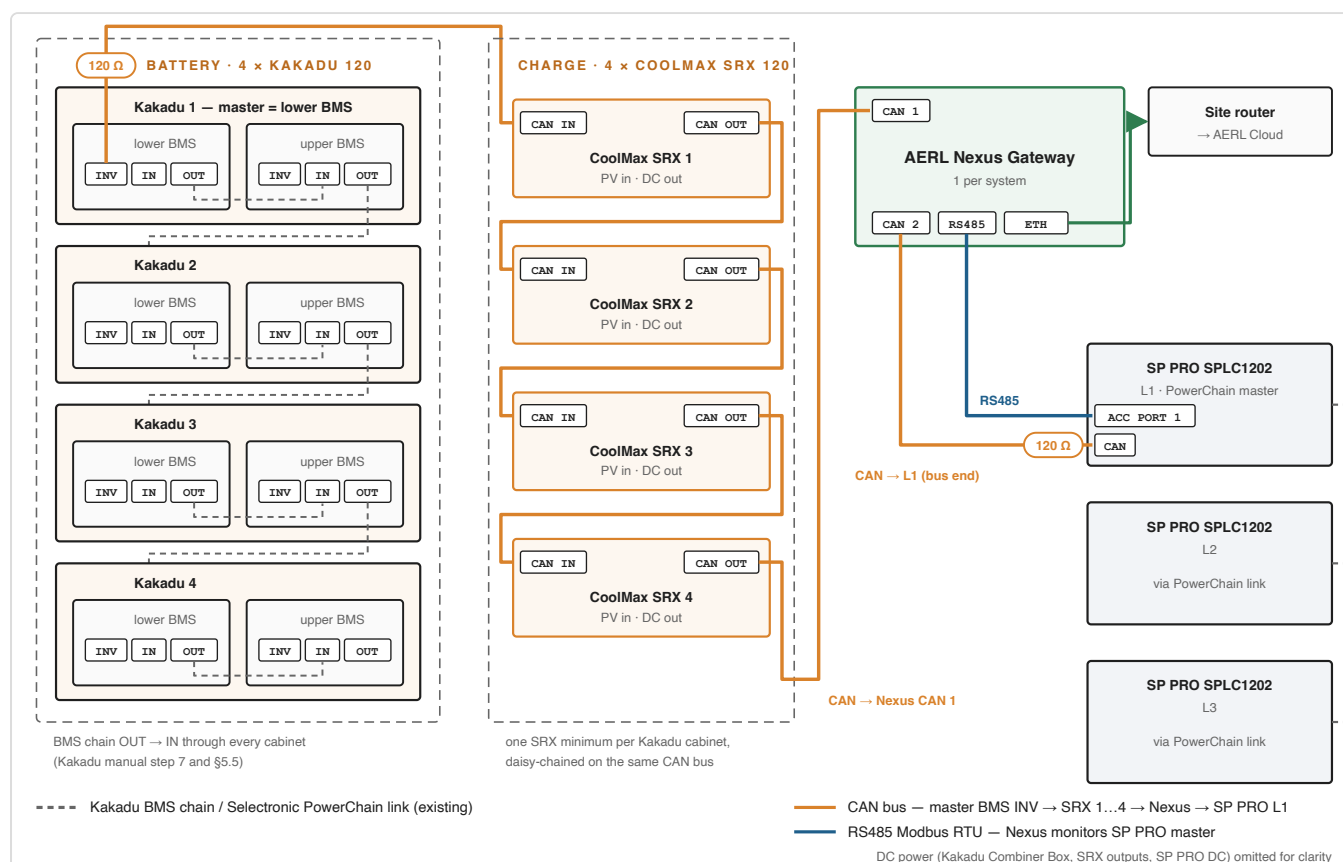


FIGURE 3.2 Four cabinets (8 BMS) through one Kakadu Combiner Box to a three-phase PowerChain of SPLC1202s. The CAN bus runs master BMS **INV** → SRX 1 → SRX 2 → SRX 3 → SRX 4 → Nexus → SP PRO L1. The same pattern scales to 16 cabinets, with at least one SRX per cabinet.

3.4 SP PRO to BMS cable

The SP PRO and the Kakadu BMS use different RJ45 pins for CAN. Connect the SP PRO to the CAN bus with the SP PRO to BMS cable, which re-maps the pins. **A standard straight-through patch lead will not work.**

Plug the SP PRO end into the SP PRO CAN socket (the PowerChain master on a PowerChain system). Plug the BMS end into Nexus **CAN 2**.

SP PRO END — PIN	SP PRO END — SIGNAL	BMS END — PIN	BMS END — SIGNAL
1	CAN_H	4	—
2	CAN_L	5	—
4	—	1	CAN_H
5	—	2	CAN_L
3, 6, 7, 8	—	Not connected	—

Pins 1/2 at each end cross to pins 4/5 at the other end, as shown in Selectronic's *BMS to SP PRO CAN Bus cable* application note. The cable is symmetrical and works either way round.

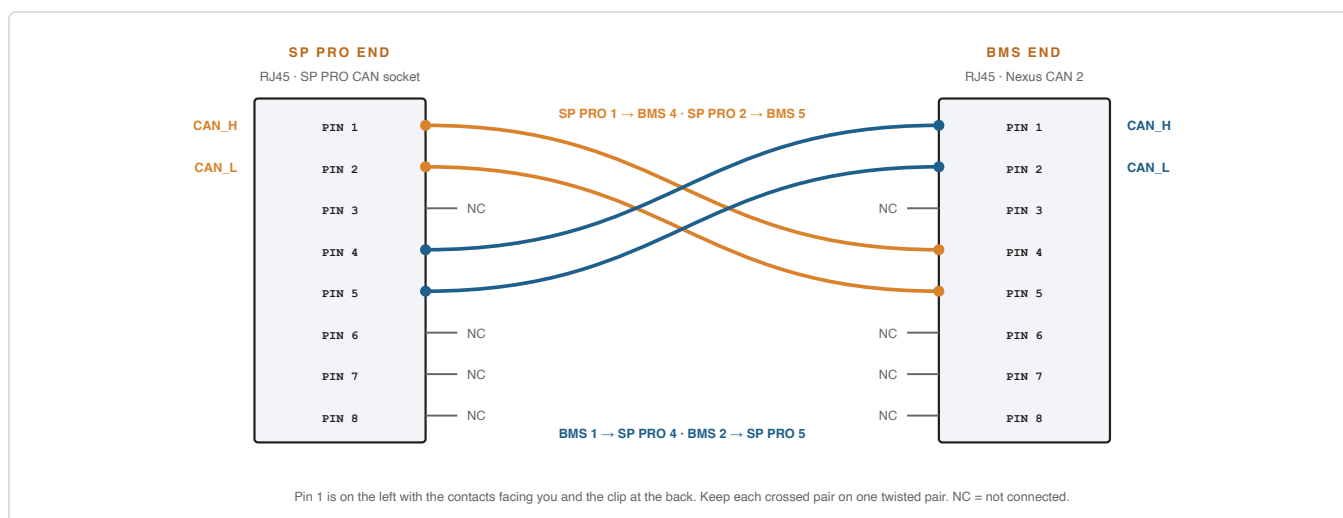


FIGURE 3.3 SP PRO to BMS cable pinout, both directions.

If you make the cable up yourself, keep CAN_H and CAN_L on one twisted pair, and check every pin for continuity against the table before you fit it.

CHAPTER 04

Set-up

4.1 AERL Nexus Gateway

4.1.1 SET UP THE NEXUS AS NORMAL

Follow the AERL Nexus installer guide *Selectronic SP PRO → AERL Cloud* (Rev 1.0.0). In summary:

- 1 Connect the Nexus RS485 socket to SP PRO ACC Port 1 with a straight-through CAT5e/CAT6 patch lead.
- 2 Connect the CAN bus as described in Chapter 03.
- 3 Connect Ethernet from the site router, then power the Nexus on. It connects to AERL Cloud automatically.
- 4 At aerl.cloud, go to **Setup → Claim Gateway**. Enter the serial number and PIN from the Nexus sticker, then assign the gateway to a location.
- 5 Go to **Gateways → your Nexus → Edit Gateway → Add Modbus Device**, pick **Selectronic SP PRO** and click **Add Device**. The configuration applies within about five minutes.

The Kakadu BMS and the CoolMax SRX units on the CAN bus are discovered automatically.

4.1.2 EMS FIRMWARE PUSH — CONTACT AERL

Once the Nexus is online and claimed, **contact AERL technical support to push the EMS firmware to the Nexus and the CoolMax SRX units**. Have the following ready:

- the Nexus serial number
- the serial number of every CoolMax SRX
- the number of Kakadu cabinets, and the SP PRO configuration (single inverter or PowerChain)
- the site name and location as claimed in AERL Cloud.

AERL confirms when the push is complete. Then check in AERL Cloud that the Kakadu and every SRX are reporting.

4.2 Setting up the CoolMax SRX

Set up every CoolMax SRX on the site with AERL Link:

- 1 Download and install the latest version of **AERL Link**, then connect to the SRX.
- 2 Change the **preset** to **Kakadu**.
- 3 Change the **Battery Type** to **Kakadu**.
- 4 Check that the charge settings match Figure 4.1, then save the settings to the SRX.

Also set the CANBUS 120 Ω switch on every SRX to **OFF** (section 3.1).

The screenshot shows the AERL Link settings interface for a CoolMax SRX. The settings are as follows:

Setting	Value
Battery Voltage	120V
Battery Type	Kakadu
Max Charge Current	30A
Charge Stages	
Absorption Voltage (1)	153.0V
Equalization Voltage	144.0V
Float Voltage (2)	153.0V
Absorption Stage	
Absorption Duration	2h 0m
Tail Current	2A
Equalization Stage	
Equalization Enabled	Off
Equalization Duration	0h 0m
Equalization Interval	0 days
Float Stage	
Re-bulk Voltage	143.0V
Temperature Compensation	On
Low Temperature Cutoff Enabled	On
Low Temperature Cutoff Point	0°C
Temperature Compensation Offset	32mV/°C
Temp Compensation Baseline	25°C

FIGURE 4.1 AERL Link charge settings for the CoolMax SRX with the Kakadu preset and battery type.

4.3 SP PRO — System → Communication (Modbus to the Nexus)

The screenshot shows the 'Communication' settings for the SP PRO. The settings are as follows:

Setting	Value
Port 1 Baud Rate	57600
Port 1 DTR/DCD	Enabled
Port 1 Comm Card Input	Internal (RJ45)
Port 2 Baud Rate	9600
Port 2 DTR/DCD	Enabled
Modbus RTU Port	9600 8bit None 1stop
Modbus RTU Address	1

Modbus available only to approved system integrators.

Improper integration will cause system instability.

FIGURE 4.2 System → Communication.

SETTING	VALUE
Port 1 Baud Rate	57600
Port 1 DTR/DCD	Enabled
Port 1 Comm Card Input	Internal (RJ45)
Port 2 Baud Rate	9600
Port 2 DTR/DCD	Enabled
Modbus RTU Port	9600 · 8 bit · None · 1 stop
Modbus RTU Address	1

These Modbus settings must match what the Nexus expects: slave 1, 9600 baud, 8N1.

4.4 Save, upload and site-specific settings

- 1 Confirm the SP LINK Battery Type is **BMS – SelectCell River Gum** (Figure 4.3).
- 2 Save the configuration and upload it to the SP PRO.
- 3 In SP LINK, open **Data View → Battery Management** and confirm that the Kakadu BMS data is shown. This view is only available with a managed battery.
- 4 Confirm in AERL Cloud that SP PRO data appears on the Nexus within about five minutes.



FIGURE 4.3 SP LINK Battery Type set to BMS – SelectCell River Gum.



SITE-SPECIFIC PARAMETERS

Installers must set up all other parameters as required for their site. These include unit application, nominal AC voltage and frequency, AC source power, generator controller settings, generator schedule start, AC input, power quality / DRM, inputs and outputs, and PowerChain settings.

4.5 Final checks

#	CHECK
1	Kakadu master BMS Master Unit LED is lit, and Last Unit is lit on the final string only.
2	CAN bus runs SP PRO → Nexus → SRX ... → Kakadu master BMS INV . The SP PRO connects through the SP PRO to BMS cable.
3	SP PRO CAN termination DIP switch ON. Every SRX CANBUS 120 Ω switch OFF. No terminator at the Nexus.
4	RS485 runs from the Nexus to ACC Port 1 on the SP PRO (PowerChain master). The Nexus is the only Modbus master.
5	Nexus is claimed in AERL Cloud, and the Selectronic SP PRO Modbus device has been added.
6	AERL has confirmed the EMS firmware push to the Nexus and every SRX.
7	Every SRX is set up in AERL Link with the Kakadu preset and Battery Type Kakadu .
8	SP LINK: Battery Type BMS – SelectCell River Gum .
9	SP LINK Data View → Battery Management shows the Kakadu BMS data.
10	Kakadu, every SRX and the SP PRO are all reporting in AERL Cloud.
11	Site-specific parameters, including generator control, have been set.

CHAPTER 05

AERL technical support

AERL SUPPORTEmail: support@aerl.com.auPhone: **1800 950 865**Web: www.aerl.com.au**ADDRESS**

AERL

1/75 Bluestone Circuit

Seventeen Mile Rocks QLD 4073

Australia

When you contact AERL, include

- the site name, and the Nexus serial number
- the serial numbers of the CoolMax SRX units, and the number of Kakadu cabinets
- the SP LINK *Inverter Details* and *Battery Management* screenshots, and the exported SP LINK configuration file
- a short description of what you see, including the Nexus Tx/Rx LEDs if the issue is with RS485 comms.