

INSTALLATION & OPERATION

CoolPro

Cathodic Converter™

Model • CP30



DOCUMENT	REVISION	MODEL	MAX CP CURRENT
AER04	2.0.0	CP30	30 A

CONTENTS

01	Safety information Disclaimer, symbols, manual scope	02	02	Specifications Options, ratings, electrical characteristics	03
03	Overview Features & safety information	05	04	Cathodic protection background Ground bed, potential, control modes	06
05	PCB layout Terminals & adjustment	09	06	Circuit breakers & mounting Protection & location	11
07	Installation Wiring, connections, setup	12	08	Operating guidelines Low battery, interruption, modes	15
09	Revision history Document change log	16	10	Meter board sub-assembly LCD, RS485 / Modbus telemetry	17

SAFETY

Important safety information

Disclaimer

AUSTRALIAN ENERGY RESEARCH LABORATORIES PTY LTD, ITS AFFILIATES, AGENTS, AND EMPLOYEES, AND ALL PERSONS ACTING ON ITS OR THEIR BEHALF (COLLECTIVELY, "AERL"):

(A) DISCLAIM ANY AND ALL LIABILITY FOR ANY ERRORS, INACCURACIES OR INCOMPLETENESS CONTAINED IN ANY DATASHEET OR IN ANY OTHER DISCLOSURE RELATING TO ANY PRODUCT.

(B) ASSUMES NO RESPONSIBILITY OR LIABILITY FOR LOSS OR DAMAGE WHETHER DIRECT, INDIRECT, CONSEQUENTIAL OR INCIDENTAL, WHICH MIGHT ARISE OUT OF USE OF SUCH INFORMATION. THE USE OF ANY SUCH INFORMATION WILL BE ENTIRELY AT THE USER'S RISK.

(C) RESERVES THE RIGHT TO CHANGE ANY AERL PRODUCT, PRODUCT SPECIFICATIONS AND DATA WITHOUT NOTICE TO IMPROVE RELIABILITY, FUNCTION OR DESIGN OR OTHERWISE.

Notice of copyright

AERL CoolPro Cathodic Converter™ User Manual Copyright © AERL 2026. All rights reserved. AERL reserves the right to periodically revise this document and to make changes to the content without notice.

This installation manual contains important safety information and installation instructions for the CoolPro Cathodic Converter™. The following symbols are used throughout this user manual to indicate ideal installation methods, to indicate potentially dangerous conditions, and important operational information.

**IMPORTANT**

Indicates information that must be followed to ensure proper operation of the CoolPro Cathodic Converter™.

**CAUTION**

Indicates a critical procedure for the safe installation of the unit, or provides safety information that is required to be followed.

About this manual

- This manual provides detailed installation and usage instructions for the CoolPro Cathodic Converter™. Read **all** the instructions and cautions in this manual before beginning the installation of the unit. **Only qualified electricians and technicians may install the CoolPro Cathodic Converter™.**
- Do not disassemble or attempt to repair this system unless qualified and have written permission from AERL to do so.
- AERL will not be held responsible in any way for mishandling of this product or for installation of the product in a manner that does not comply with the instructions described in this manual.

REFERENCE

Product specifications

MODEL

MODEL	MAX ANTI-CORROSION CURRENT
CP30	30 A

OPTIONS

OPTION	FUNCTION
Surge Buster	Lightning surge arrestor
Structure / Ref Cell Potential Control	Accurate corrosion protection for structures where overprotection is harmful

Surge Buster

The lightning protection module with a total of 110,000 Amps of MOV surge protection provides common mode and differential surge protection for all inputs, outputs, and local cabinet earth, and interrupt control and reference cell connections to the CoolPro Cathodic Converter. It also contains the optically isolated ON/OFF control and a surge protected opto-coupler for buffered/isolated ON/OFF interrupt control if permanently connecting an interrupt sequencer.



IMPORTANT

To validate AERL's CoolPro Cathodic Converter product warranty in lightning prone applications (all pipelines and structures longer than 100 metres or higher than 10 metres), this 50 kA / 500 Joule "Surge Buster" lightning protection buffer module must be used to supplement the on-board surge protection in the CoolPro Cathodic Converter.

SURGE BUSTER — ELECTRICAL CHARACTERISTICS	VALUE
Output current rating (non-repetitive 8/20 μ s rating)	50,000 A
Output energy absorption (non-repetitive 8/20 μ s rating)	500 Joules
Output energy absorption (non-repetitive 10/1000 μ s rating)	230 Joules

REFERENCE

Specifications

Constant structure potential control mode

In some situations, overprotection of a structure may be harmful. Examples of such situations include protection of structures with painted coatings, and structures under mechanical stress (such as tanks and pressure vessels). In these circumstances, precise control of corrosion potential can be achieved using a reference cell placed in the ground near the structure to be protected.

CONSTANT STRUCTURE POTENTIAL

PARAMETER	VALUE
Min. controllable structure / ref cell potential	-2400 mV
Max. controllable structure / ref cell potential	2400 mV

CP30 — ABSOLUTE MAXIMUM RATINGS

PARAMETER	MAX
Max ambient air temp.	65 °C (12/24 V) · 50 °C (36/48 V)
I_{batt} — max output current	30 A
V_{MIN} — min input voltage	11 V
V_{MAX} — max input voltage	60 V

PHYSICAL CHARACTERISTICS

PARAMETER	TYPICAL
Weight	1.5 kg
Dimensions (L × W × H)	240 × 160 × 90 mm
Input / output cable size	25 mm ²

CP30 — ELECTRICAL CHARACTERISTICS

DESCRIPTION	VALUE
V_{OUT} — output voltage (adjustable)	0 - V_{IN}
I_{q} — standby current consumption	35 mA
η — efficiency @ 10 V, 30 A, 25 °C	97.00%
Output current variation with load	< ±0.50%
Output current variation with temp.	< ±0.50%
Current interruption fall time	1–2 ms (typ)

SECTION 1

Overview

The AERL CoolPro Cathodic Converter™ is a robust and integrated cathodic protection controller which is able to be operated in parallel to protect even the largest metallic structure. It is an efficient, high-current DC-DC converter for impressed current cathodic protection. Its high efficiency makes it perfect for use in solar powered applications. This efficient power electronics design also minimises component operating temperature and thermal cycling, prolonging the lifetime of the controller even when operating in high ambient temperatures. The durable weatherproof enclosure makes the product an excellent choice for the harsh environments in which cathodic protection is often deployed.

Optional extras such as automatic Reference Cell Control and the AERL "Surge Buster" help to protect your investment and get the most out of your corrosion protection system. Some of the device's main features include:

- Robust thermal design with no cooling fans and efficiencies of up to 98%.
- Designed to operate in harsh conditions and in ambient temperatures between -20 and +65 °C (12 V / 24 V input) or +50 °C (36 V / 48 V input).
- Rugged and reliable design including a durable weatherproof enclosure.
- Compact and lightweight compared to competing brands.
- Can drive in parallel to provide any desired level of anti-corrosion protection (except for structure potential control mode).
- On-board LCD display showing output voltage and current.
- On-board surge protection with optional supplementary "Surge Buster".
- High speed ON/OFF control to measure instantaneous off potential.
- Automatic low battery cut out to protect from over discharge.

**CAUTION — IMPORTANT SAFETY INFORMATION**

The CoolPro Cathodic Converter™ can operate at lethal voltages. Extreme caution should be exercised at all times when using the product.

Battery packs are extremely destructive in reverse polarity and short circuit situations. The CoolPro on-board fuse is provided only as a last line of defence against continual power dissipation in the product. It is always necessary to connect appropriately sized circuit breakers.

All electronic circuits in the CoolPro product or connected to the product are not isolated from the battery. This means that accidentally shorting the control module or the LCD meter module can cause a destructive failure. Use extreme caution when the product is live.

SECTION 2

Cathodic protection background

When a structure corrodes, it is because the environment or another metallic body (a cathode) becomes involved in a series of chemical reactions with the structure (the anode). These reactions steal electrons from the metallic bonds holding the structure together, and corrosion is the result.

Impressed current cathodic protection such as supplied by the AERL CoolPro Cathodic Converter™ injects electrical current into the structure, which provides the structure with a surplus of electrons. This means that electrons can still be provided to the environment to fuel the cathodic reactions – but the anodic reaction does not occur, so metallic bonds in the structure are safe from degradation. The protection current is injected using inert metallic anodes and flows through the ground bed to the structure.

2.1 • Ground bed resistance

Resistance anywhere in the path between the anode and the structure is a cause of wasted corrosion protection power and should be minimised. Multiple anodes are often used to reduce the resistance between the anode and the ground bed. Additionally, mesh anodes with high surface areas can be used, and coke breeze is used as an interface between the anode and the earth.

2.2 • Corrosion potential

The corrosion potential of the structure can be thought of as the electrochemical force driving the anodic reactions in the structure to occur. Corrosion potential varies depending on the environmental conditions and the presence of other corrosion-inhibiting factors such as a protective coating. Using impressed current cathodic protection, the aim is to reduce the corrosion potential of the structure so that the anodic reactions are no longer driven to occur.

Determining the correct level of current to provide to the structure is not trivial. Providing too little current can mean that the structure is not completely protected and will corrode. Too much current can lead to other chemical reactions resulting in effects such as hydrogen embrittlement of the structure and breakdown of any protective coatings on the pipe. The corrosion potential of the structure can be determined and accurately corrected for using a reference cell.

2.3 • Reference cell measurement

A reference half-cell is generally used to survey the corrosion potential in a local area around the structure to be protected. This determines the natural electrochemical corrosion potential which must be cancelled out by impressing current from the CoolPro unit. From now, all discussions will deal with a Copper/Copper sulphate half-cell, which is a commonly employed type. Impressing current into the structure makes it chemically less anodic; this will be reflected in its potential measured with respect to the Cu/CuSO₄ half-cell. The ideal potential to exist between a Cu/CuSO₄ reference cell and a structure is 850 mV (with the reference cell more positive).

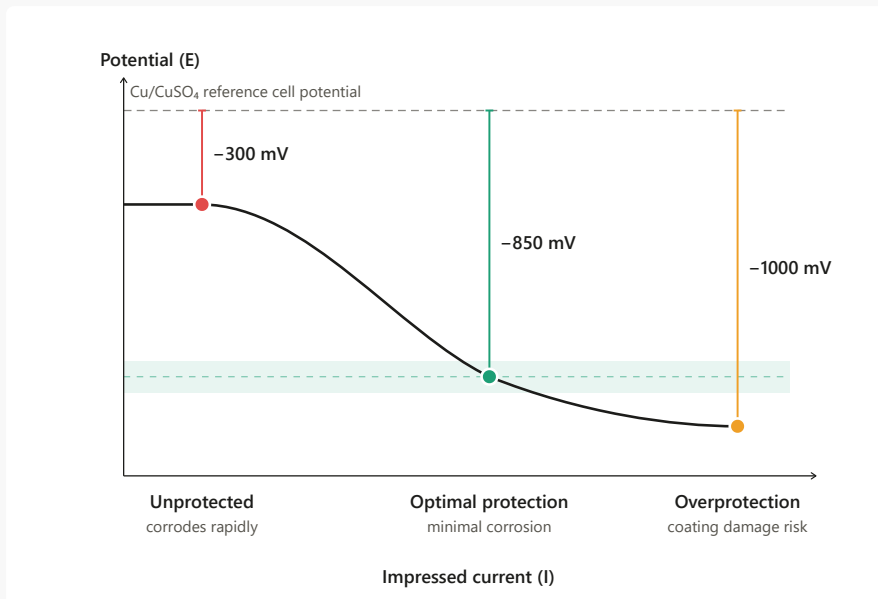


FIGURE 1 • THE VOLTAGE BETWEEN THE STRUCTURE AND THE HALF-CELL CHANGES WITH APPLIED CP CURRENT

2.4 • Instantaneous potential

It is desirable to measure the potential of the structure while it is being protected to make sure it is close to the optimal -850 mV level. The problem is that while protection current is flowing there is an ohmic error introduced in the reference cell measurement due to the CP current flowing through the resistance of the ground bed. To reduce the severity of this error, care should be taken to place the reference cell much closer to the structure than the anode injection point.

To compensate for this error even further, the CP current is removed and then instantaneously the potential of the structure is measured. Because the corrosion potential of the structure takes some time to decay back to its natural state, it can be accurately measured a few milliseconds after the ohmic error is removed. This is referred to as measuring the "Instantaneous Off Potential" of the structure.

2.5 • Protection current control modes

There are three control modes in the CoolPro unit, although only one can be active at any time. The control modes are output current control mode, output voltage control mode, and structure / ref cell potential control mode.

2.6 • Control mode relationships

Output current and output voltage are related by Ohm's law with the ground bed resistance between the anode and the structure. Ground bed resistance changes with many factors but the major one is ground moisture content. However, at any two given times, if the setup and environment are completely unchanged, a given output voltage will produce the same output current. Struct/ref potential is related to output current by the electrochemical relationships governing how much current is needed to prevent corrosion from occurring.



NOTE

The control mode which is commanding the lowest CP current will always be active.

2.7 • Using the control modes

Each of the control mode setpoints provides upper limits on the CP current that can be produced. The lowest setpoint will always be the active limit on the CP current.

Using Ref Cell control: Struct/ref potential control mode is tuned to give the desired instantaneous off potential (see Section 7). Current control mode and voltage control mode are used to set the maximum power that can be delivered by the system in the event of a non-typical operating condition. These should be selected paying attention to the estimated ground bed resistance and being careful not to interfere with the normal operation of Struct/Ref potential control mode.

Not using Ref Cell control: Struct/ref potential control mode is disabled by linking the Struct/ref terminals and turning the adjustment dial clockwise all the way. Current control mode is set to be the desired constant CP current. Voltage control mode setpoint is selected to limit the power delivered by the CP system if the ground bed resistance changes due to local or generalised reductions in ground bed moisture. For example, if regulating in current control mode and the ground bed resistance doubles during a dry period, because $P = I^2R$ the power output will double if not checked by the voltage control mode setpoint.

SECTION 3

PCB layout

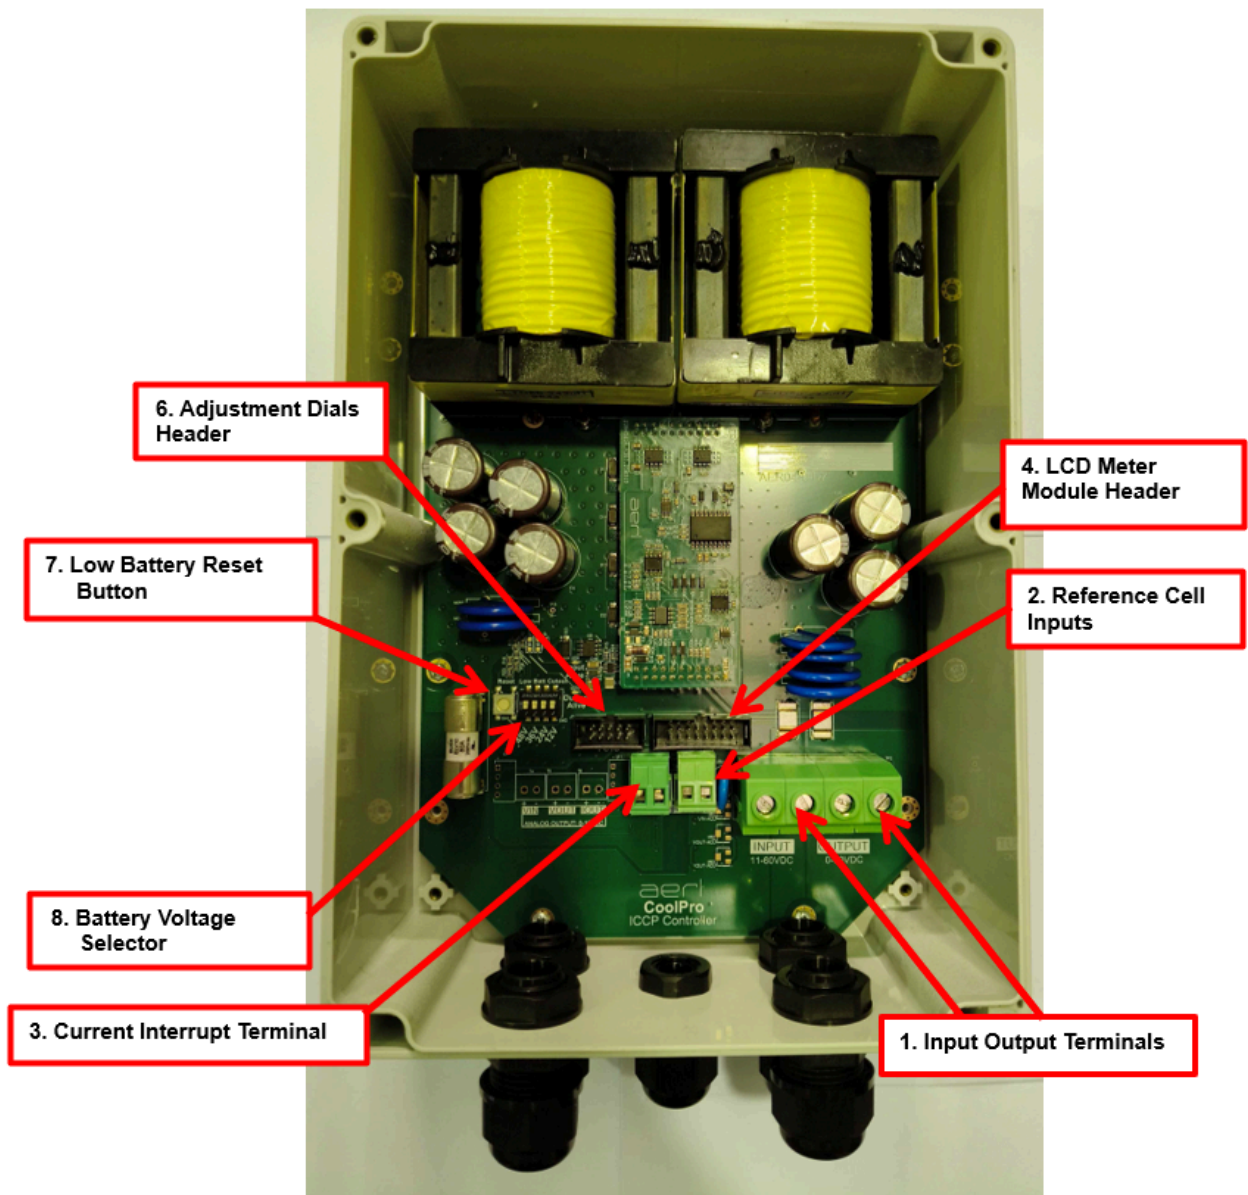


FIGURE 2 • COOLPRO INTERNAL PCB LAYOUT

Terminal & indicator functions

The numbered callouts in Figure 2 (previous page) correspond to the board positions below.

POS.	DESCRIPTION	FUNCTION
1	Input / output terminals	Connect battery and load with polarity marked on board. Output + to anode. Output - to structure.
2	Reference cell inputs	Connect to ref cell and to structure being protected.
3	Current interrupt terminal	Short terminals together to immediately interrupt current.
4	LCD meter module header	Ribbon cable connection to front panel LCD meter module.
5	Adjustment dials header	Ribbon cable connection to front panel adjustment dials.
7	Low batt reset button	Reset hysteresis on low battery cut out.
8	Battery voltage selector	Select nominal input voltage for low battery cut out. See arrow for "on" position.

SECTION 4

Circuit breakers


**NOTE**

AERL recommends the use of 6 kVA, 8 kVA or 10 kVA DC-rated circuit breakers with an appropriate voltage rating between the batteries and the CoolPro unit.

Using an output circuit breaker or fuse is not recommended as large currents can be shunted by the onboard surge protection circuitry and the “Surge Buster” during surges. This will cause the output breaker to trip unnecessarily.

SECTION 5

Mounting

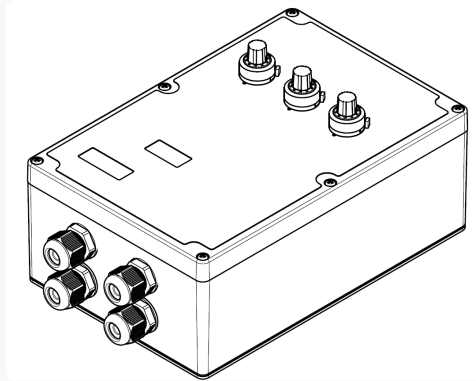

COOLPRO ENCLOSURE – ADJUSTMENT DIALS AND CABLE GLANDS

5.1 • LOCATION

**CAUTION**

The CoolPro enclosure is not intended to be mounted where splashing water or direct sunlight can reach the unit.

The “Surge Buster” board is a bare PCB and, if used, should be protected from all moisture and vermin. Cables should always be routed downwards away from the CoolPro and Surge Buster products so that any moisture which may condense on the cables does not run back into the product.

The aluminium cold plate on the back of the enclosure is the source of heat dissipation for the CoolPro controller. The CoolPro unit will run more efficiently and last longer if the product can be spaced out such that air is allowed to flow past the aluminium plate.

SECTION 6

Installation

6.1 • Wiring diagram

The diagram shows the AERL CoolPro connected through a Surge Buster buffer (delineated into a “safe side” and “surge side” by a dashed vertical boundary) to the field equipment: the reference cell connects back to the Ref Struct (+) terminal and the structure connects via the Surge Buster output on the safe side, while on the surge side the output feeds the anode and the input is fed from the battery bank. A remote current interrupt switch ties in to the CoolPro’s Link On/Off through the surge-protected path.

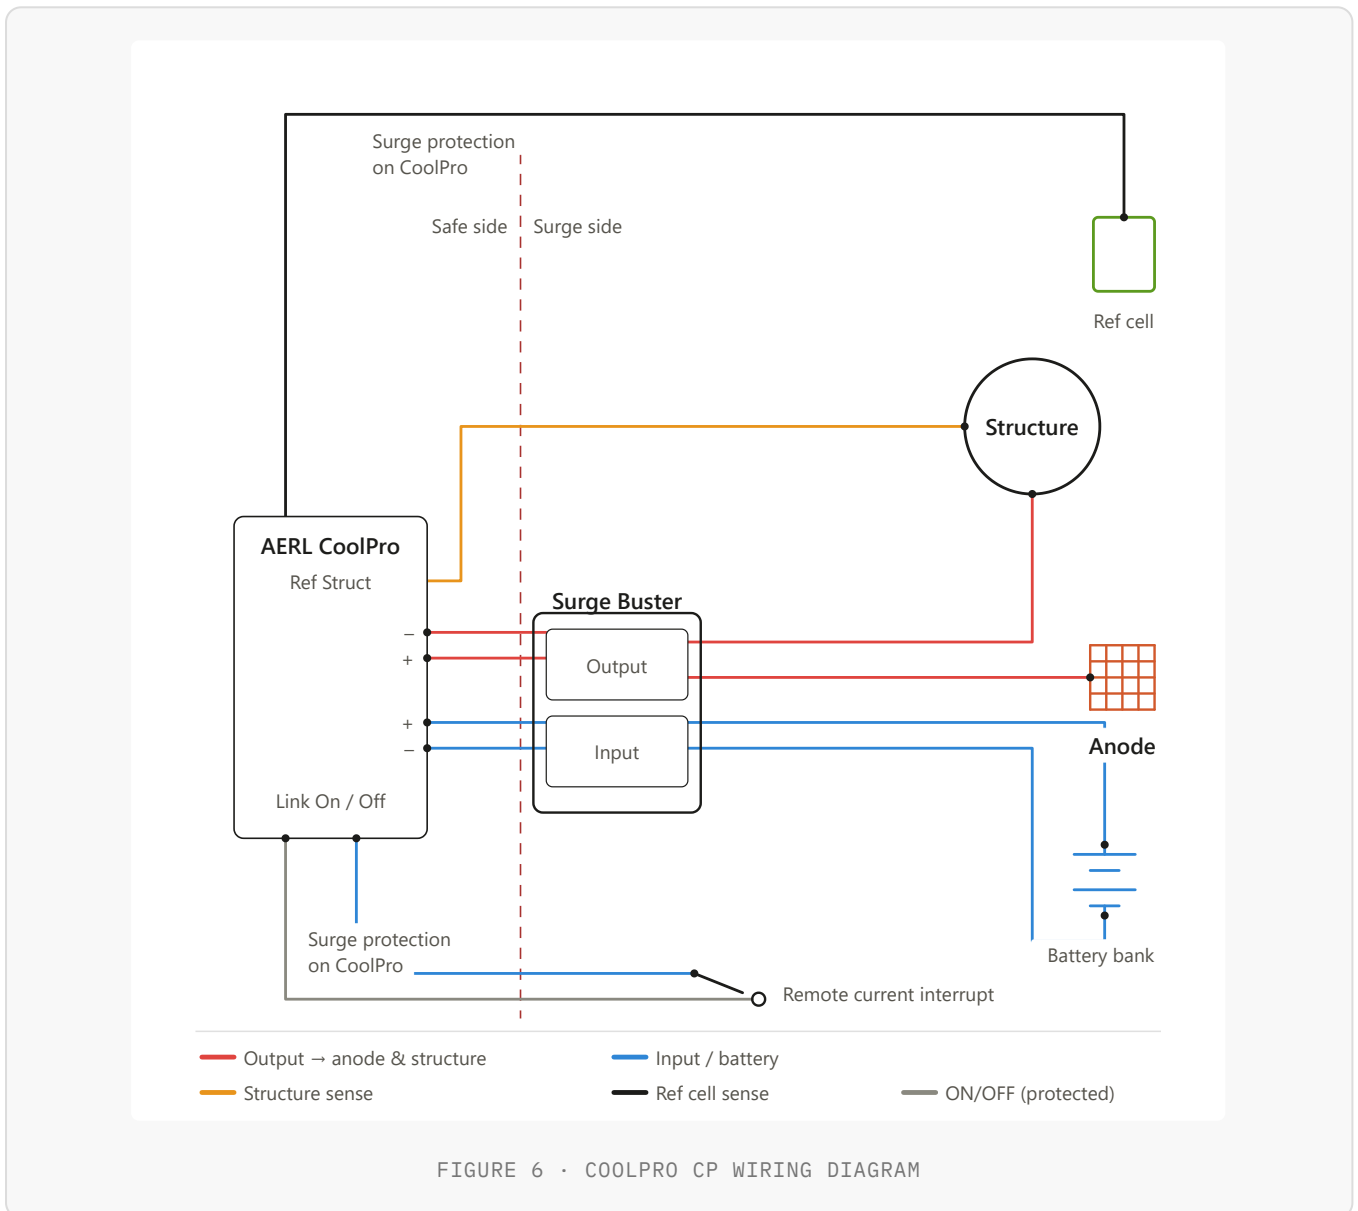


FIGURE 6 • COOLPRO CP WIRING DIAGRAM

6.2 • Connections



CAUTION

Make all connections with breakers isolating the product from any voltage.

Connect the input battery + and – to the terminals marked input + and –.

Connect the output anodes to the terminal marked output + and the protected structure to the terminal marked output –.

Use appropriately rated wire for all connections. Check the input polarity with a multimeter before closing any breakers.

6.3 • Setup



IMPORTANT

Press the appropriate battery voltage dipswitch corresponding to a nominal battery / input voltage of 12 / 24 / 36 / 48.

Wind all three adjustment dials on the front panel anti-clockwise all the way — this will correspond to the setpoints of all control loops being at zero, in preparation for configuring the control loops.

When the breakers are closed, the “input alive” LED should immediately light up. If the adjustment dials are correctly set to zero, the “output alive” LED should not be lit yet.

6.4 • Configuration

There are three control modes in the CoolPro controller: output current control mode, output voltage control mode, and structure / ref cell potential control mode.



NOTE

Only one control mode can be active at any time. The control mode with the lowest setpoint will always be active.

The setpoints are raised by turning the adjustable dials on the front panel of the CoolPro unit clockwise and lowered by turning them anti-clockwise. The control mode setpoints will have to be set using the adjustable dials on the front panel while the CoolPro unit is running.

6.5 • Setting the current control mode setpoint

- Wind all three adjustment dials on the front panel anti-clockwise all the way — this corresponds to the setpoints of all control loops being at zero, in preparation for configuring the control loops.
- When the breakers are closed, the “input alive” LED should immediately light up. If the adjustment dials are correctly set to zero, the “output alive” LED should not be lit yet.
- Now adjust the voltage (and S/R if being used) by turning the adjustable “Voltage” dial on the front panel clockwise by a few turns to move the setpoints up. No current should flow and the output alive LED should not come on — because the current control adjustable dial should still be set to zero current.
- Now the current control setpoint will be the lowest, so it should be limiting the output. Slowly turn the adjustable “Current” dial on the front panel upwards while measuring the output current. If the output current stops rising while turning the adjustable dial, one of the other control modes may have taken over and you may need to adjust it higher to let the current control mode start limiting again.

6.6 • Power down procedure

Follow this procedure to safely shut down the CoolPro unit. This aims to prevent voltage / current transients on the protected structure.

- Wind all three adjustment dials on the front panel anti-clockwise all the way — this corresponds to the setpoints of all control loops being at zero.
- Verify 0 output on the LCD display for at least 2 complete cycles. The “Output Alive” LED should turn off.
- Open input breakers. The “Input Alive” LED should turn off.

SECTION 7

Operating guidelines

7.1 • Low battery cutout

CoolPro Cathodic Converters are fitted with an automatic low battery cut-out feature to protect lead acid batteries from over-discharge. The system will cut out when the battery voltage is below the cut-out voltage, and will wait until the battery has been recharged to the cut-in voltage before resuming normal operation.

**NOTE**

The battery can be forced to cut in at any time above the cut-out voltage by pressing the 'low batt reset' pushbutton.

NOMINAL BATTERY VOLTAGE	CUT-OUT	CUT-IN
12	11 V	13 V
24	22 V	26 V
36	33 V	39 V
48	44 V	52 V

7.2 • High speed current interruption

The output of the CoolPro controller can be reduced to zero very quickly for the purposes of instantaneous off potential measurement. This is done using the terminals marked "Link Off" on the CoolPro unit — terminals linked = output disabled.

7.3 • Ref cell control mode

If the Ref Cell Option has been fitted, the CoolPro controller will need to be calibrated for the correct structure / ref cell corrosion potential. To calibrate the unit for the Ref Cell Option, adjust the "Ref Cell" adjustable dial on the front panel of the unit while measuring the structure / ref cell voltage with a multimeter (or using the high speed current interruption and measuring with an oscilloscope) until the desired structure / ref cell voltage is reached.

**NOTE**

The reference cell can be controlled over a range of +2400 mV to -2400 mV.

7.4 • Constant current output mode

CoolPro Cathodic Converters™ are generally operated in constant current output mode. The output current is set using the adjustable dials located on the front panel of the unit.

7.5 • Constant voltage output mode

The voltage limit overrides the current control mode in situations where the ground bed resistance increases due to periods of low ground moisture content. This effectively limits the power that can be drawn from the batteries, protecting the batteries from heavy cycling. The voltage limit is set using the “Voltage” adjustable dial located on the front panel of the unit.

SECTION 8

Revision history

DATE	VERSION	DESCRIPTION
17/07/2013	AER004.002 G1 v1	Initial Draft
22/04/2014	AER004.002 G1 v2	Updated Images and Text
22/04/2016	AER004.002 G1 v4	Updated Testing Information
21/09/2017	AER004.002 G1 v6	Further Improvements & Updated Design
13/01/2018	AER004.002 G1 v7	Updated Design
13/06/2018	AER004.002 G1 V8	Warranty Changes
09/12/2025	AER004.002 G1 v9	Update For New Hardware

SECTION 9

Meter board sub-assembly

9.1 • Overview

The Meter Board is a microcontroller-driven sub-PCB mounted alongside the CoolPro power stage. It provides:

- LCD readout of input voltage / current, output voltage / current, and board temperature.
- RS485 / Modbus RTU telemetry for remote monitoring.
- Factory-set device identification and Modbus communication settings, persisted to onboard non-volatile memory.

**IMPORTANT**

The Meter Board is a **monitoring path only**. RS485 / Modbus traffic does not change output current, voltage limit, or reference-cell setpoint. Those remain manual front-panel adjustments per Section 6.

The unit is calibrated and tested at the AERL factory. Re-calibration is a workshop operation; contact AERL if a unit's measurements drift.

9.2 • LCD display operation

During normal operation, the LCD alternates between input and output measurements every 5 seconds. Each screen shows the corresponding voltage, current, and the board temperature.

9.3 • RS485 / Modbus telemetry

Default communication parameters: **9600 baud, 8-N-1, station 40.**

If the deployment requires a non-default Modbus station address or baud rate, specify the desired values when ordering and AERL will pre-program them at manufacture. The settings are persisted in non-volatile memory and survive power cycles. The unit can also be re-addressed in the field at runtime over the Modbus interface.

RS485 CONNECTOR PINOUT (RJ45)

The Meter Board exposes RS485 on a standard 8P8C **RJ45** connector.

PIN	SIGNAL	PIN	SIGNAL
1	NC	5	NC
2	NC	6	RS485 B
3	RS485 A	7	NC
4	NC	8	GND



NOTE

Pins 1, 2, 4, 5, and 7 are not connected. Use only pins 3 (A), 6 (B), and 8 (GND).

The full register map (live measurements, status flags, device information, and configuration registers) and protocol are available from AERL on request.

ADDRESS

Australian Energy Research Laboratories

1/75 Bluestone Circuit
Seventeen Mile Rocks
Queensland, 4073, Australia

PHONE & WEB

Phone: **+61 1800 950 865**

Email: sales@aerl.com.au

Web: www.aerl.com.au